



ZS-300

Technical Data	ZS-300 (-1) (-5)
Material	All 304 stainless steel housing, door, (with neoprene gasket), shaft, coupling, universal mounting plate, and hardware.
Material Thickness:	16 GA
Conduit holes	Field drilled as required. U.L. listed electrical fittings for NEMA 4X conditions must be used.
Operating shaft (Ordered separately)	1/2" by 5 15/16" long 304 stainless steel with integral coupling for direct mounting to 1/2" round or hexagonal drive shafts. Square head set screws are 304 stainless steel.
Optional shafts	ZS-300-C1 1/2" shaft adaptor (standard with housing) ZS-300-C2 3/4" shaft adaptor ZS-300-C3 1" shaft adaptor
Rotating shaft seal	Machined PVC hub, bronze oilite bearings, 10 PSI, Nitrile, bi-rotational, hydrodynamic, radial lip Wave seal.
Industry standards	The Belimo ZS-300 NEMA 4X enclosure and Belimo model GM, AM, AF, NF and LF are U.L. listed as an assembly. These enclosures conform to the NEMA standard for Type 4X (water-, dust-tight and corrosion resistant).
Weight	11 lbs. [5 kg] without actuator or mounting brackets.

ZS-300 NEMA 4X Housing

For AM, GM, AF, NF, LF Series Actuators

Application

The ZS-300 (-1) NEMA 4X enclosures may be used with GM, AM, AF, NF and LF Belimo actuators. They are intended for use primarily to provide protection against corrosion, windblown dust and rain, splashing water, hose-directed water; undamaged by the formation of ice on the enclosure. Type 304 stainless steel enclosures resist moisture, dust, salt, and corrosive chemicals, and are easy to keep clean for sanitary applications.

Operation

The ZS-300 enclosures are designed so that the required actuator may be easily mounted in the enclosure. The operating shaft and coupling are inserted from the backside through the rotating shaft seal. The actuator is fastened on the end of the operating shaft and secured at the end with an anti-rotation strap. Adjustable mounting brackets, if supplied, are assembled to the fixed mounting holes at the top and bottom of the enclosure with stainless steel nuts, bolts and lock washers. The direct drive coupling is designed for a 1/2" round or hexagonal shaft and secured with two square head set screws. Mounting brackets are adjusted and secured in place.


Ordering Information

ZS-300 Housing with mounting brackets
ZS-300-1 Housing without mounting brackets
ZS-300-5 316L enclosures, custom mounting brackets and operating shaft/couplings are available. Consult Belimo.

Accessories


ZS-300-BK Mounting bracket set
ZS-300-C1 1/2" shaft adaptor (standard with housing)
ZS-300-C2 3/4" shaft adaptor
ZS-300-C3 1" shaft adaptor

Dimensions [All numbers in brackets are in millimeters.]

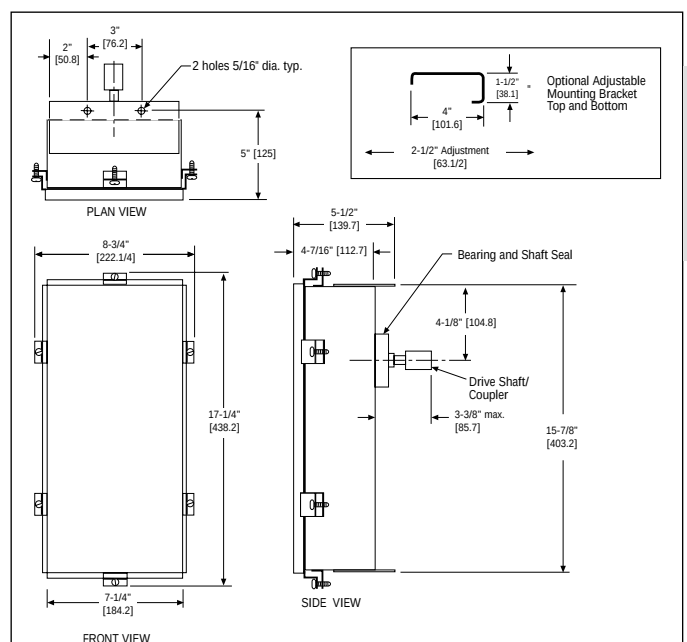

ZS-300 (-1, -5)

NEMA 4X, stainless steel, corrosion resistant enclosures for AM, GM, AF, and NF actuators

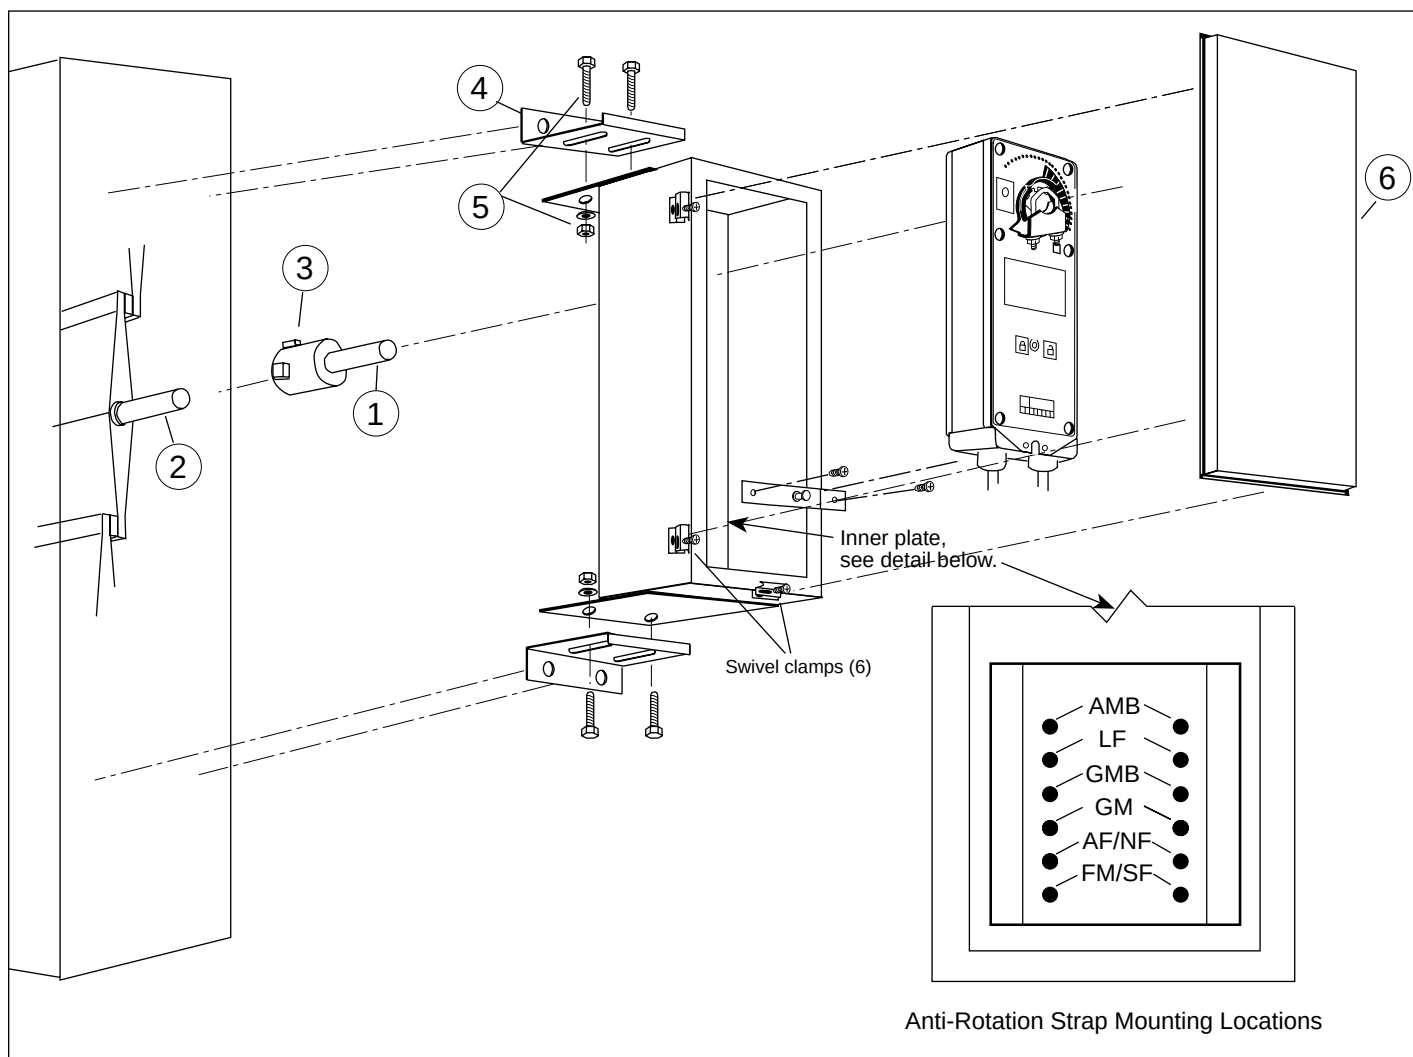

ZS-300 Mounting Instructions

1. The damper operating shaft should extend approximately 1 1/2 inches from the damper assembly or duct side. Mount the drive shaft/coupler ① to the damper operating shaft ②. Fasten the coupler to the damper operating shaft by tightening the two 3/8 inch square head set screws ③.
2. Determine the housing mounting orientation for the application.
3. Locate the housing hole position(s) for the control wiring of the actuator.
4. Make the necessary holes in the housing for the electrical fittings. All fittings must be rated for use in NEMA 4X applications.
5. Install (if ordered with) the 2 mounting brackets ④ to the housing using the four 1/4-20 screws, washers, and nuts ⑤. Do not tighten.
6. Carefully slide the housing over the drive shaft.
7. Place the housing in the desired mounting position. Transfer the mounting hole locations from the mounting bracket to the mounting surface.
8. Drill the 4 holes and fasten the brackets to the surface.
9. Install the anti-rotation strap to the housing in the correct location for the actuator which is being used.
10. Mount the actuator to the drive shaft using the instructions for the actuator being used. Finger tighten the nuts of the universal clamp. Make sure the back of the actuator is parallel to the back of the housing.
11. The operating shaft must pass through the mounting clamp at least 3/8 of an inch. It must not extend beyond the front of the housing. Slide the actuator/housing assembly in the mounting brackets to obtain the proper position.
12. Tighten the mounting brackets to the housing. Verify that the back of the actuator is still parallel to the back of the housing. Tighten the nuts on the universal clamp.
13. Make all of the required electrical connections.
14. Test the actuator/damper operation.
15. Fasten the housing cover ⑥ using the 6 swivel clamps.