

The following installation details apply to models BD-130/230, CBD-130/230



## General

The following guidelines provide basic installation instructions for adding counterweights to backdraft dampers.

### Components:

- (1) Counterweight Bracket
- (1) Counterweight
- (2) ½" Tek Screws
- (1) ¼ -20 x ¾" Bolt
- (1) ¼ -20 Hex Nut

Quantities are per each kit ordered

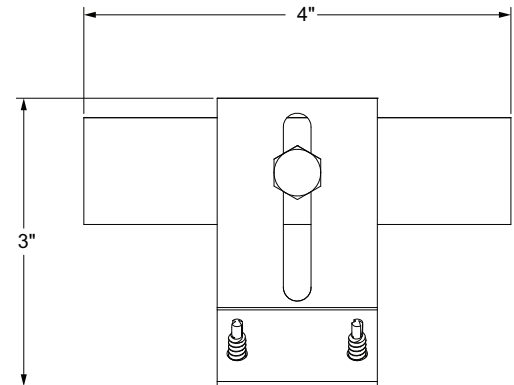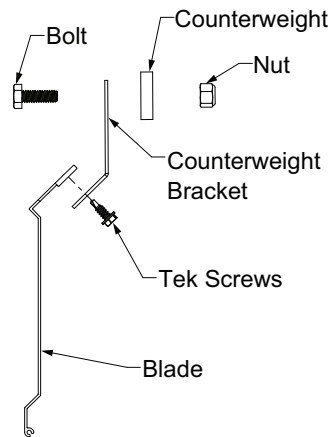

## Installation

1. Attach counterweight bracket to the blade using the tek screws provided as shown in Figure 1 (Make sure the tek screws do not interfere with the blade above.)
2. Attach the counterweight to the bracket with a nut and bolt as shown in Figure 2.
3. Adjust counterweight up and down. In order to maximize counterweight effect, the counterweights should be adjusted away for the blade pivot point.

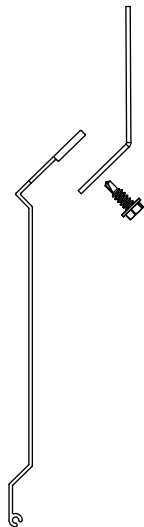


Figure 1

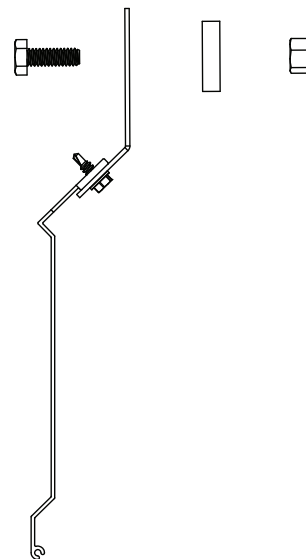


Figure 2